



**Points of contact during fly-in: +32 477 97 16 02 // +32 499 29 65 92**

## **PILOT BRIEFING**

### **Paradrop activities:**

During the FLY-IN paradrop activities will be limited.

- It's strictly PROHIBITED to OVERFLY the airfield
- Take into account a few minutes of holding time while a drop is in progress.
- Mandatory holding zones while a drop is in progress are indicated on the "area chart" (Holding "TURBI" and Holding "DADIE")
- Moorsele Radio will inform you on first contact about paradrop activities

### **Demonstration flights:**

Please note that NO landings and take-off's will be allowed during following time slots:

#### **Saturday:**

- 11:00 LT – 11:30 LT
- 16:00 LT – 16:30 LT

#### **Sunday:**

- 14:30 LT – 15:00 LT
- 15:45 LT – 16:15 LT

#### **Demo:**

- BAF Red Devils
- BAF Seaking

### **UK (non-SCHENGEN) visiting pilots:**

- During our FLY-IN you can fly DIRECT from the UK to EBMO without transiting through a customs airport
- It's however MANDATORY to fill out the GAR form and forward it to: [event.ebmo@gmail.com](mailto:event.ebmo@gmail.com)
- The GAR form can be found on our website under "pilot registration". Customs located at EBKT will be notified of all GAR's that we receive, spot checks at EBMO can be expected.

### **Please also pay attention to the following points:**

- Opening hours saturday and sunday: 10:00 LT – 18:00 LT
- RADIO IS MANDATORY
- Contact Moorsele Radio on 120,500Mhz at least 5 minutes before joining the circuit
- Do NOT enter ATZ without two-way radio contact
- Circuit altitude is 1000ft AGL, RH downwind for RWY22, always report downwind and final for the active RWY
- Contact with Moorsele radio BEFORE start-up is mandatory
- Aerobatics overhead or in the vicinity of the airfield are prohibited
- Be aware that EBMO is situated just 3NM NW of EBKT. (Kortrijk Radio 120,250Mhz)
- There is NO FUEL available at EBMO, however avgas 100LL and jet A1 is available at EBKT


### **RMZ (Radio Mandatory Zone) around EBKT:**

- Contact "Kortrijk Radio" on 120,250 when crossing the RMZ of EBKT
- All traffic with destination EBMO will be allowed to contact Moorsele radio even when you are still within the RMZ


## Taxi procedures and parking

When arriving at the parking area, marshallers will guide you to your correct parking spot

### **RWY22 in use:**

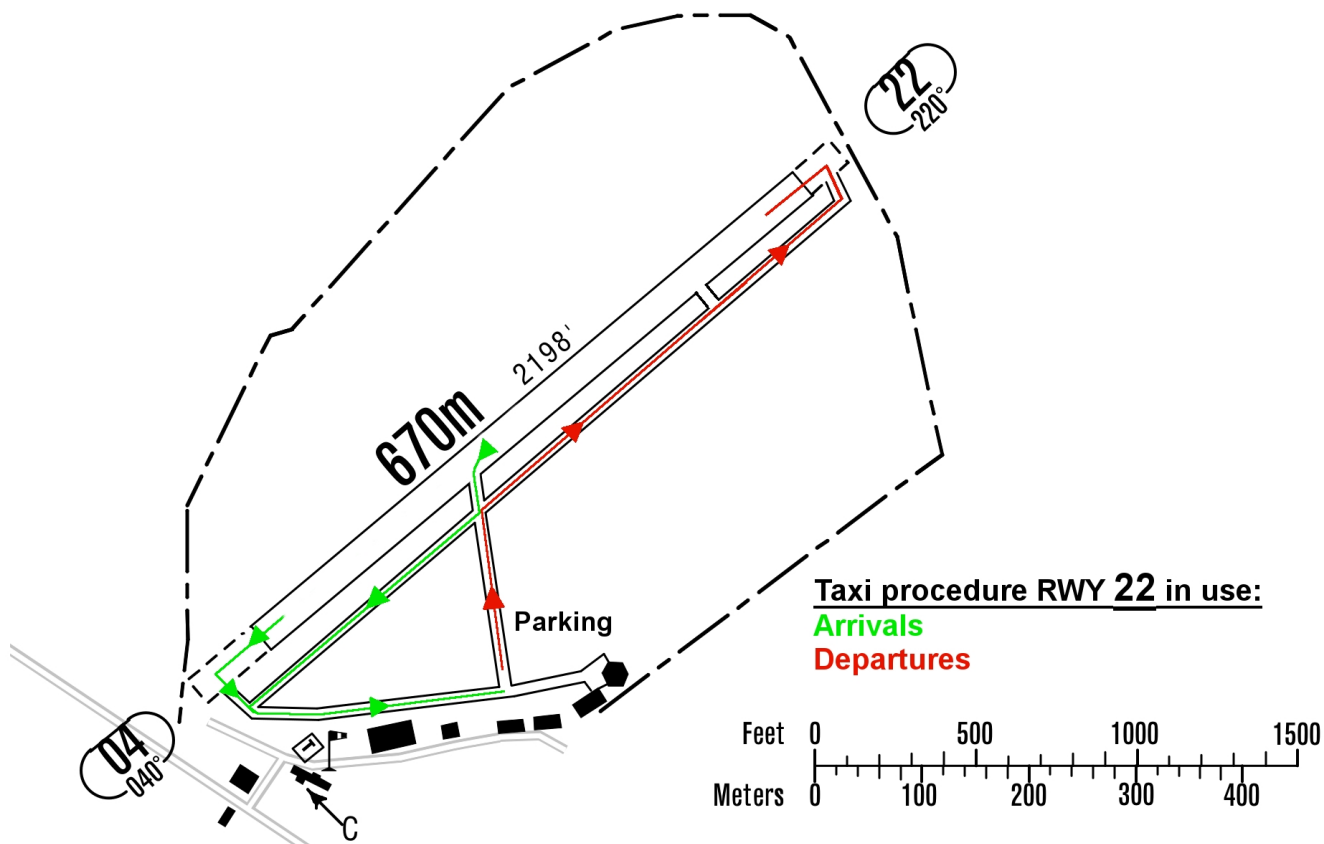


### **RWY04 in use:**

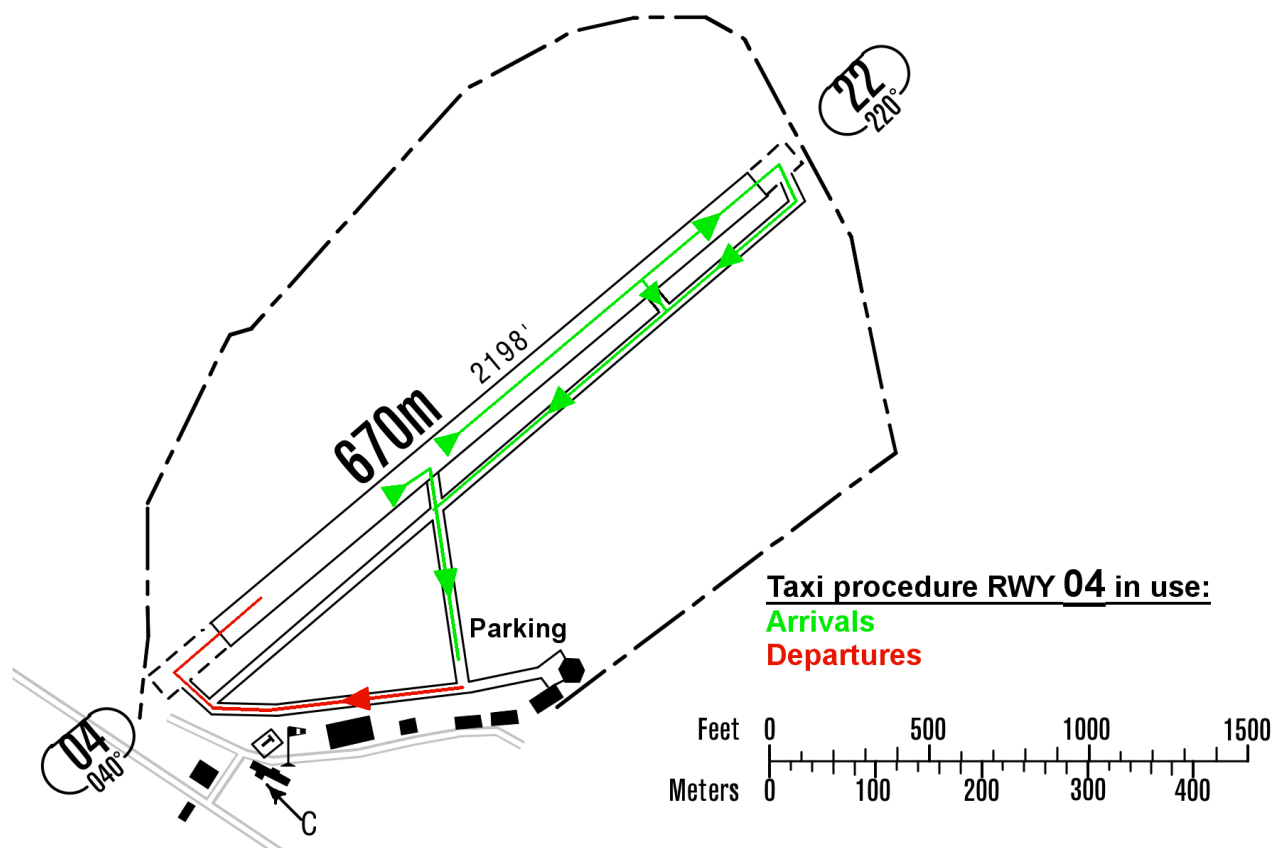

BRIEFING STRIP™

LOCATION Elev <b>66'</b> /20m N50 51.2 E003 08.8	AFIS MOORSELE RADIO <b>120.500</b> (en)	ADMITTED AIRCRAFT  
--	--	--

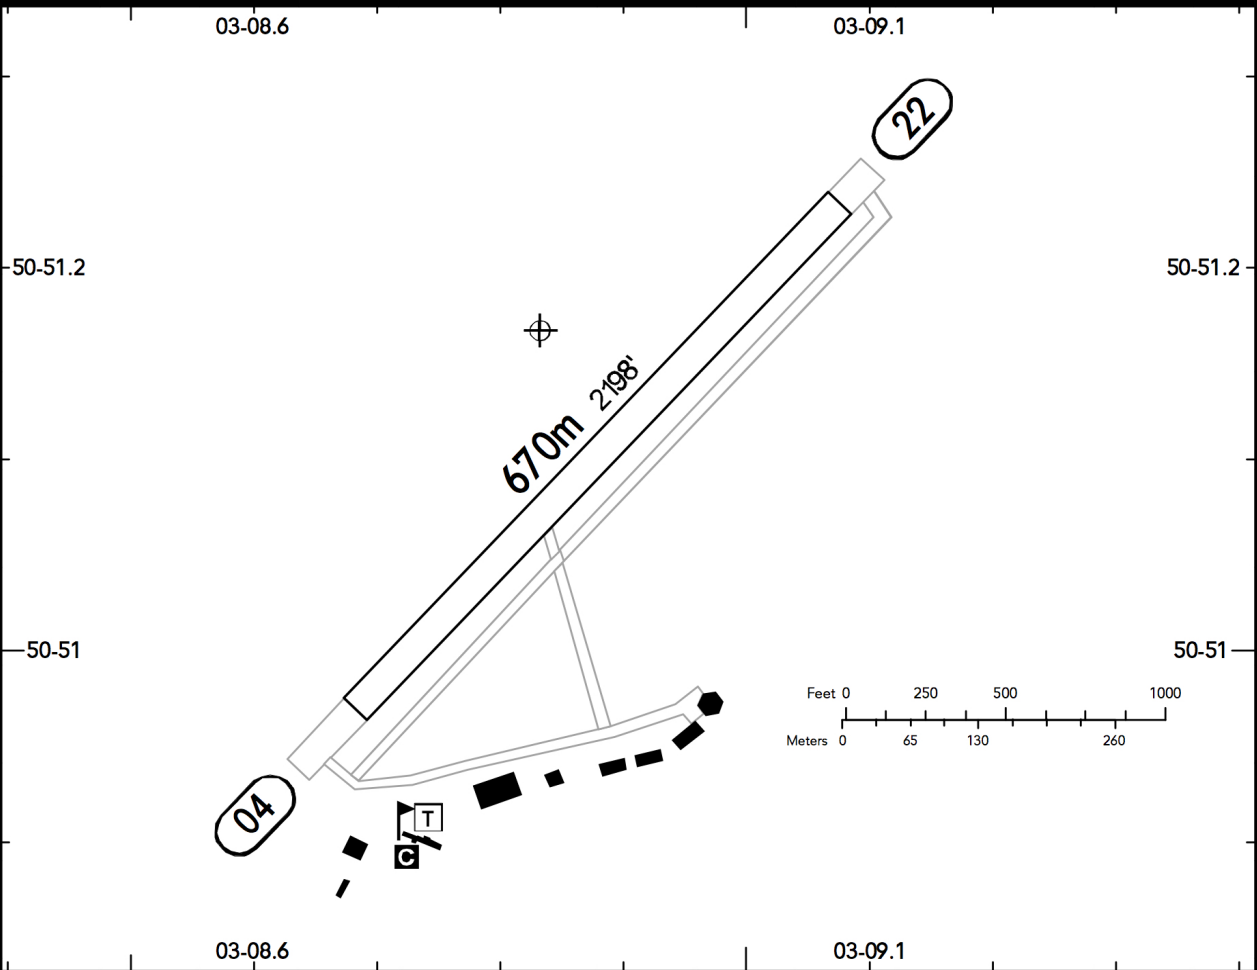

SCALE 1:10000

RWY No	Dimension (m) - Surface	TORA (m)	LDA (m)	Strength	Lights
04 22	670 x 30 Grass			5.7t	---

Parachuting in VMC only.  
Vacate RWY only via TWY.  
AD unusable outside TWY.  
Jet aircraft operations not allowed.